

MODE Free

Wall Dock and Back Box Installation Guide


Wall Dock Pack includes:

- (1) Wall Dock
- (2) Wall Dock Mounting Screws
- (1) Back Box
- (1) Grounding Screw (Installed)
- (4) Position Tabs (Installed)
- (4) Position Tab Screws (Installed)
- (4) Mounting Clips
- (2) Drywall Screws


Back Box Bulk Pack includes:

- (10) Back Boxes each containing:
- (1) Grounding Screw (Installed)
- (4) Position Tabs (Installed)
- (4) Position Tab Screws (Installed)
- (4) Mounting Clips
- (2) Drywall Screws

PRE-CONSTRUCTION INSTALLATION TIPS

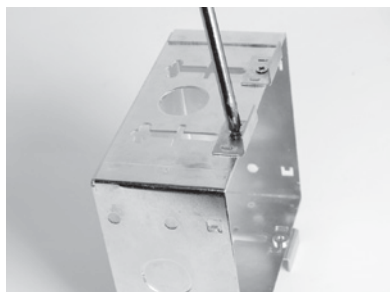

1. For a Pre-Construction installation, make sure to remove the retro mounting tabs from the top and bottom of the back box.

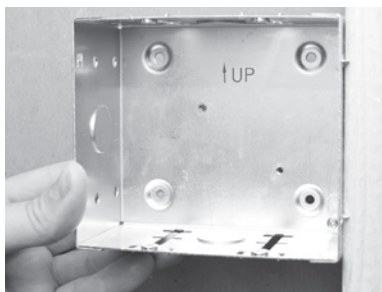

2. Place the Back Box against a wall stud (up arrow pointing up), use the metal tabs on either the right or left side of the enclosure. This will help place the enclosure against the stud evenly. Tabs are set for 1/2" dry wall. If thicker drywall is used, make sure to accommodate for the difference.




3. Use the drywall screws provided to secure the back box to the stud as shown.


RETRO INSTALLATION TIPS




1. Using a level with a straight edge mark out the cut lines for the back box. Cut out is W 4 7/8" x H 4 1/8" (124 mm x 105 mm).

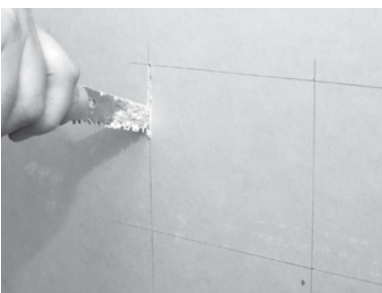



2. Using a drywall saw, cut the drywall, keeping the drywall blade on the outside of the line you have marked out in step 1. Do not cut the hole too big or the mounting tabs will not function correctly.

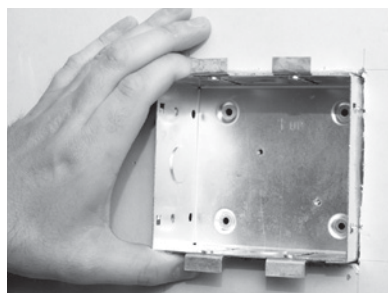

3. The back box will come pre-configured for an Retro installation; correctly orientate the back box by making sure the up arrow faces up. Place the Back Box flush into the hole.

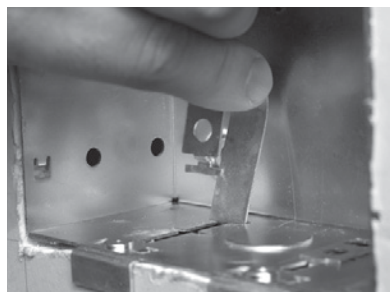


4. While holding the Back Box in place, install the mounting clip(s) in as shown, do this for the top and bottom.

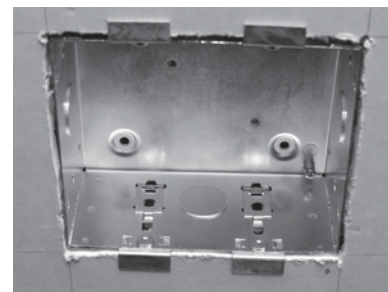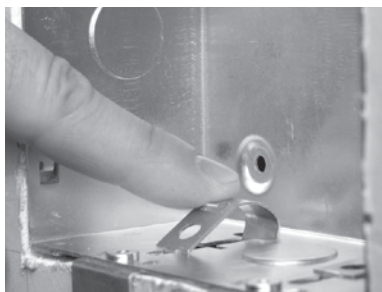


5. Finished Product

WALL DOCK AND KEYPAD INSTALLATION

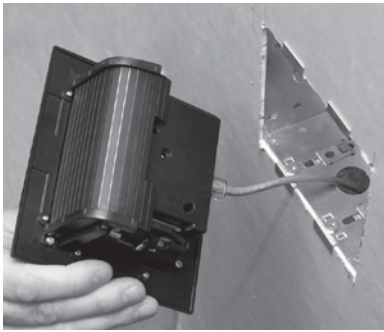

1. Run a CAT 5 cable to the back box location; punch out one of the knock out tabs to run the wire through. **NOTE:** It is recommended the wire is run up through the bottom knock out hole; this will give more room for the RJ45 connector, and will alleviate any issues of pinching the wire during installation.

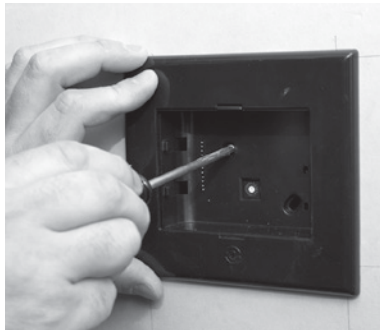

2. Attach the Wall Dock to the Back Box with the two mounting screws that are provided with the wall dock.



3. Starting from the left, angle the MODE Free into the Wall Docking Station, then click into place.



4. Finished Product

SPECIFICATIONS

Cut-Out Size: W 4 $\frac{7}{8}$ " x H 4 $\frac{1}{8}$ " (124 mm x H 105 mm)

LIMITED 2-YEAR WARRANTY

Defective products must be shipped, together with proof of purchase, prepaid insured to the SpeakerCraft Authorized Dealer from whom they were purchased, or to the SpeakerCraft factory at the address listed on this installation instruction manual. Freight collect shipments will be refused. It is preferable to ship this product in the original shipping container to lessen the chance of transit damage. In any case, the risk or loss or damage in transit is to be borne by the purchaser. If upon examination at the Factory or SpeakerCraft Authorized Dealer it is determined that the unit was defective in materials or workmanship at any time during this warranty period, SpeakerCraft or the SpeakerCraft Authorized Dealer will, at its option, repair or replace this product at no additional charge, except as set forth below. If this model is no longer available and can not be repaired effectively, SpeakerCraft, at its sole option may replace the unit with a current model of equal or greater value. In some cases where a new model is substituted, a modification to the mounting surface may be required. If mounting surface modification is required, SpeakerCraft assumes no responsibility or liability for such modification. All replaced parts and product become the property of SpeakerCraft Inc. Products replaced or repaired under this warranty will be returned to the original retail purchaser, within a reasonable time, freight prepaid.

This warranty does not include service or parts to repair damage caused by accident, disaster, misuse, abuse, negligence, inadequate packing or shipping procedures, commercial use, voltage inputs in excess of the rated maximum of the unit, or service, repair or modification of the product which has not been authorized or approved by SpeakerCraft. This warranty also excludes normal cosmetic deterioration caused by environmental conditions. This warranty will be void if the Serial number on the product has been removed, tampered with or defaced.

This warranty is in lieu of all other expressed warranties. If the product is defective in materials or workmanship as warranted above, the purchaser's sole remedy shall be repair or replacement as provided above. In no event will SpeakerCraft be liable for any incidental or consequential damages arising out of the use or inability to use the product, even if SpeakerCraft Inc. or a SpeakerCraft Inc. Authorized Dealer has been advised of the possibility of such damages, or for any claim by any other party. Some states do not allow the exclusion or limitation of consequential damages, so the above limitation and exclusion may not apply.

All implied warranties on the product are limited to the duration of this expressed warranty. Some states do not allow limitation on the length of an implied Warranty. If the original retail purchaser resides in such a state, this limitation does not apply.

If you have any questions regarding this or any other SpeakerCraft product, please contact your local Authorized SpeakerCraft dealer, or you may contact SpeakerCraft toll-free at 1-800-448-0976 for immediate customer assistance. We are available to assist you every weekday, except holidays, between the hours of 7:00 a.m. and 5:00 p.m.



940 Columbia Avenue, Riverside, CA 92507 | USA (800) 448 0976 Fax (951) 787 8747 International +1 951 787 0543 | www.speakercraft.com

LIT14420(rev2)