

PROFICIENT

Signature™

OWNER'S MANUAL

Inwall LCR Speakers

IW675s • IW575s

SPEAKER PLACEMENT

Inwall LCR Speakers can be used in any position of a home theater speaker system. A single Inwall LCR Speaker can be used for the front center channel, or a pair can be used for left and right in the front or rear of the system.

Using as a Center Channel Speaker

Inwall LCR Speakers have been designed to blend seamlessly with all Proficient inwall and ceiling speakers. For center channel applications, install the Inwall LCR Speaker horizontally into the wall as close to the screen as possible. This most often means it will need to be installed just above or below the television. Vertically lining it up with the left and right speakers while not necessary, will improve the performance. (See **Diagram 1**)

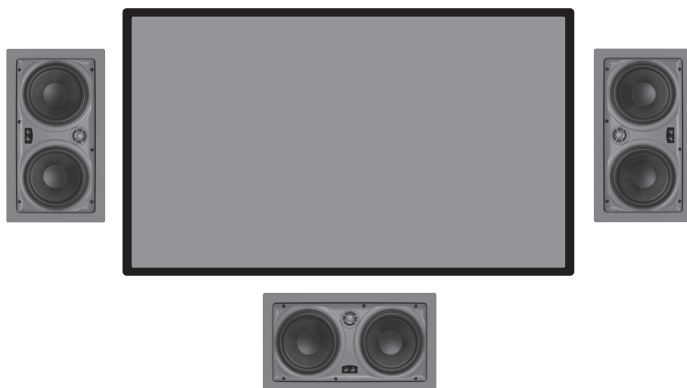 


Diagram 1:
Speaker Positioning

Using as Front Left and Right Speakers

When using Inwall LCR Speakers for front left and right speakers, position them vertically with the tweeter towards the screen. Align them with the center of the screen for optimal results. (See **Diagram 1**)

The speakers should be placed so that they form an equilateral triangle. (See **Diagram 2**) If the speakers are positioned far away from the primary listening area, adjust the pivoting tweeters so they are pointed toward the primary listening area.

Note: To avoid possible damage to the pivoting tweeters, read the section entitled "SPEAKER ADJUSTMENTS" in this manual prior to performing the tweeter adjustment.

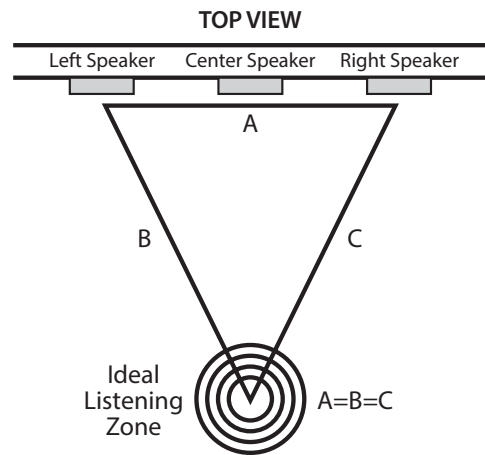 


Diagram 2:
Ideal Placement

INSTALLATION CONSIDERATIONS

Before installing your speakers into the wall, you should consider the placement carefully, taking into account the location of electrical, plumbing and other fixtures.

Contact your Dealer for assistance if you are unsure of the best location for your particular listening environment.

MOUNTING SURFACE PREPARATION

New Construction - Unfinished Walls

A Pre-Construction Bracket, available from your Proficient dealer, may be installed prior to drywall application across studs (up to 16" on-center) where a speaker will be located. After the hole is cut and the drywall is installed, the speakers are then easily installed following the instructions for mounting in "Finished Walls" below.

Finished Walls

Prior to the actual installation of the speakers, it will be necessary to run cables to the speaker locations. See your Dealer for more information about cable installation. After the cable has been properly installed, you are ready to mount the speakers. Following the simple steps listed below will result in a professional looking installation:

1. Determine the best area to mount your speakers. This area of the wall should be free of obstructions such as electrical conduit, HVAC ducts, or water lines. This can best be determined by noting the placement of fixtures and gaining access to an attic or crawl space for further analysis of the location of such obstacles.
2. Find the studs nearest the desired speaker mounting location. We highly recommend using a good stud-finder tool for this procedure. If you are lining up the speakers to some other object or molding in the room, make sure you consider the size of the baffle, which extends beyond the mounting hole.
3. Mark the hole. A template for setting the hole is provided in the box. Position the template in the desired position and pencil an outline on the wall.

4. Cutting the hole. **CAUTION: This is the most important part of the entire installation.** If you are not certain whether any obstructions exist behind the desired mounting area, you should start by cutting a small hole in the center of your penciled mounting hole with a drywall saw. Cut at a 45° angle towards the inside of the hole (See Diagram 3). Cutting the small hole at this angle will make drywall repair much easier, using the piece cut out. Once you have determined there aren't any obstructions in your desired mounting location, start cutting the finished hole at a 90° angle to the wall surface.

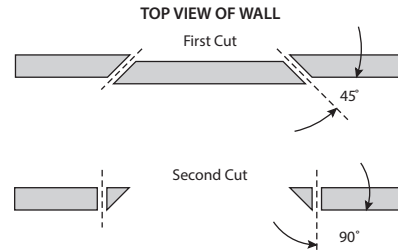 


Diagram 3:
Wall Cut Out



CAUTION: Speaker components can get hot while playing music at moderate to high volume levels. There should be nothing at all touching the speaker. Material in proximity to the back of the speaker must have at a minimum 1" or 26 mm clearance for non-flammable materials and more for flammable materials like plastic vapor barriers.

SPEAKER INSTALLATION

The unique integrated six foot mounting system incorporated into each Inwall LCR Speaker allows for a quick installation by following these easy steps:

1. Remove the grille from the speaker baffle.
2. Attach the speaker cable (observing the proper polarity with your amplifier, + to + and - to -). Make sure the left channel of the amplifier is connected to the left speaker, and the right channel is connected to the right speaker, etc.
3. Make sure the mounting feet are turned inward to clear the opening, and insert the speaker into the wall. Tighten the six screws on the front of the baffle only enough to make the speaker become snug against the wall. As you tighten the screws, the feet will automatically flip into an outward position (See Diagram 4), thereby clamping the drywall between the feet and the speaker.

CAUTION: Over tightening may warp the baffle, crack the wall or cause difficulty in aligning the grille.

4. Reattach the grille onto the speaker baffle.



Diagram 4:
Mounting Feet

 
SPEAKER ADJUSTMENTS

Your Inwall LCR Speaker comes with the tweeter facing straight out from the baffle. This will result in the overall smoothest response. However, depending on your particular primary area, room acoustics, ceiling height, or personal preference, you may find the sound more pleasing by pointing the tweeters in a particular direction. If additional treble is desired in the primary listening area, point the tweeter towards that area. Push gently at the edge of the tweeter to point it in the desired direction. (See Diagram 5)

CAUTION: Avoid touching the metal dome tweeter, as damage may occur.

For home theater use, we recommend the following tips:

- If the Inwall LCR Speaker is being used as a main front channel, the tweeter should be angled towards the listener.
- If the Inwall LCR Speaker is being used for a rear surround channel, you may wish to pivot the tweeter away from the listener to achieve a more diffused sound.

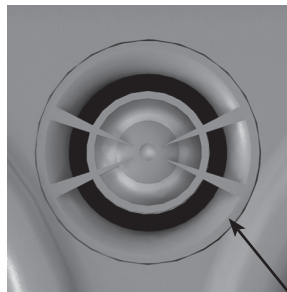

Push Tweeter Here

Diagram 5:
Tweeter

Tweeter Adjustment:

The switch labeled TREBLE allows for $\pm 3\text{dB}$ of treble adjustment. Your speakers were shipped with the treble switch in the middle position, providing the most linear frequency response. If you desire more treble, move the switch to the “+” position, and the tweeter will play 3dB higher. If you desire less treble, move the switch to the “-” position, and the tweeter will play 3dB lower. To return to the neutral setting, push the switch back to the middle position. (See Diagram 6)

Woofer Adjustment:

The switch labeled BASS allows for $\pm 3\text{dB}$ of bass adjustment. Your speakers were shipped with the bass set to the middle position. This setting provides the flattest bass frequency response. If you desire more bass, push the switch to the “+” position and the bass will play 3dB higher. If you desire less bass, push the switch to the “-” position and the bass will play 3dB lower. To return to the neutral setting, push the switch back to the middle position. (See Diagram 6)

Bass Adjustment Switch

Treble Adjustment Switch

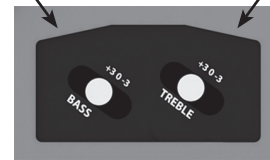 


Diagram 6:
Adjustment Switches

PAINTING THE GRILLE

We recommend painting your grille prior to installation. If you decide to paint it in the future, it's best to remove the grille by simply detaching it from the speaker. Do not paint the grille while it's installed on the speaker.

Before painting, be sure to remove the cloth material from beneath the grille. Once painted, place the cloth back to its position beneath the grille.

When painting, be careful not to clog the holes of the grille. The sound of the speaker will be dramatically reduced if the perforations in the grille are covered in paint.

Proficient recommends only light spray painting using five parts thinning agent to one part paint.

SPEAKER SPECIFICATIONS

	IW675s	IW575s
Woofers:	Two 6½" Kevlar® Cone	Two 5¼" Kevlar® Cone
Tweeter:	1" Pivoting Aluminum Dome	1" Pivoting Aluminum Dome
Contour Switches:	±3dB Bass & Treble	±3dB Bass & Treble
Power Handling:	150 Watts	125 Watts
Frequency Response:	40Hz - 22kHz	50Hz - 22kHz
Impedance:	8Ω	8Ω
Sensitivity:	90dB 1W/1m	88dB 1W/1m
Grille:	Thin-Bezel held by Neo Magnets	Thin-Bezel held by Neo Magnets
Dimensions (H x W x D):	9" x 16⅞" x 3⅜"	8" x 15⅞" x 3⅜"
Wall Cut Out (H x W):	7½" x 14½"	6⅜" x 14½"

Features and specifications are subject to change without notice.

LIMITED TEN-YEAR WARRANTY

Proficient Audio Systems ("Proficient") warrants to the original retail purchaser only ("you") that this product will be free from defects in materials and workmanship for a period of ten years (the "Warranty Period"), subject to the limitations and exclusions set out in this Limited Warranty. This warranty is not transferable to subsequent owners of the product. If you discover a defect in material or workmanship within the Warranty Period, you can obtain warranty service by contacting Proficient during the Warranty Period at 800.472.5555 or techsupport@proficientaudio.com or by contacting the dealer from whom you purchased the product. Defective products must be shipped, prepaid and insured, together with proof of purchase. Warranty service requests made without proof of date of purchase will be denied. Freight collect shipments will be refused. It is preferable to ship this product in the original shipping container to lessen the chance of transit damage. In any case, the risk of loss or damage in transit is to be borne by the purchaser.

If, upon examination by Proficient or its authorized dealer, it is determined that the unit is in fact defective, Proficient will, at its option:

- Repair or replace the product at no additional charge; or
- If the model is no longer available and can not be repaired effectively, replace the unit with a current model of equal or greater value. In some cases where a new model is substituted, a modification to the mounting surface may be required. If mounting surface modification is required, Proficient assumes no responsibility or liability for such modification.

Proficient will bear the cost of returning the repaired or replaced product to you, freight prepaid. All replaced parts and product become the property of Proficient Audio Systems. The foregoing is your sole and exclusive remedy for breach of warranty. If the product is not found to be defective, Proficient will contact you to arrange for return of the product to you, at your expense.

EXCLUSIONS:

- This Warranty does not include service or parts to repair damage caused by accident, disaster, misuse, abuse, negligence, inadequate packing or shipping procedures, commercial use, voltage inputs in excess of the rated maximum of the unit, or service, repair or modification of the product by unauthorized dealers. This Warranty also excludes normal cosmetic deterioration caused by environmental conditions.
- This Warranty will be void if:
 - the Serial Number on the product has been removed, tampered with or defaced.
 - the product was not purchased from an authorized dealer.

THE FOREGOING WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED AND IMPLIED WARRANTIES. PROFICIENT EXPRESSLY DISCLAIMS ALL SUCH OTHER WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. In no event will Proficient be liable for any incidental or consequential damages arising out of the use or inability to use the product, even if Proficient has been advised of the possibility of such damages, or for any claim by any other party. Notwithstanding the above, if you qualify as a "consumer" under the Magnuson-Moss Warranty Act, then you may be entitled to any implied warranties allowed by law for the Warranty Period. Further, some states do not allow limitations on how long an implied Limited Warranty lasts or allow the exclusion or limitation of consequential damages, so such limitations may not apply to you.

ATTENTION TO OUR VALUED CONSUMERS:

To ensure that consumers obtain quality pre-sale and after-sale support and service, Proficient products are sold exclusively through Authorized Installing Dealers and Authorized Internet Sellers. ***Please be advised that Proficient warranties are void if product is purchased from an Unauthorized Internet Seller.***

For technical inquires, please call 800.472.5555 or e-mail us at techsupport@proficientaudio.com. We are available to assist you every weekday, except holidays, between the hours of 7:00 a.m. and 5:00 p.m. PST.

PROFICIENT

5919 Sea Otter Place, Suite 100 • Carlsbad, CA 92010
800.472.5555 • Fax 707.283.5901 • proficientaudio.com

©2019 Nortek Security & Control, LLC. All Rights Reserved.
Proficient® is a registered trademark of Nortek Security & Control, LLC.



P/N: 10010950 (Rev A2)